


ZTE

Dongle Installation for Mac




Plug the dongle; The **Install Mobile Partner** wizard will start automatically

■ Click **Continue**

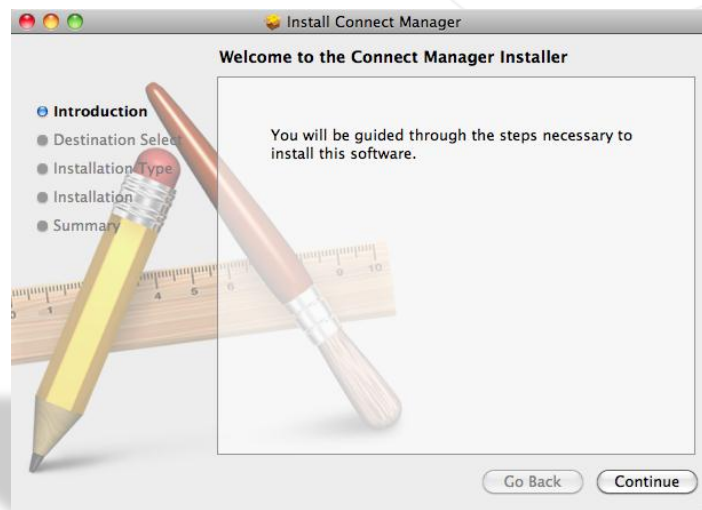


■ Click **Continue**

■ Click **Continue**

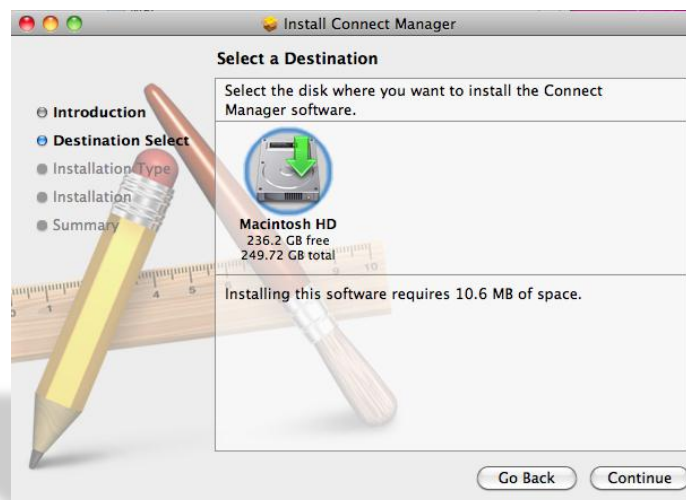


Installation Type tab

■ Click **Install**

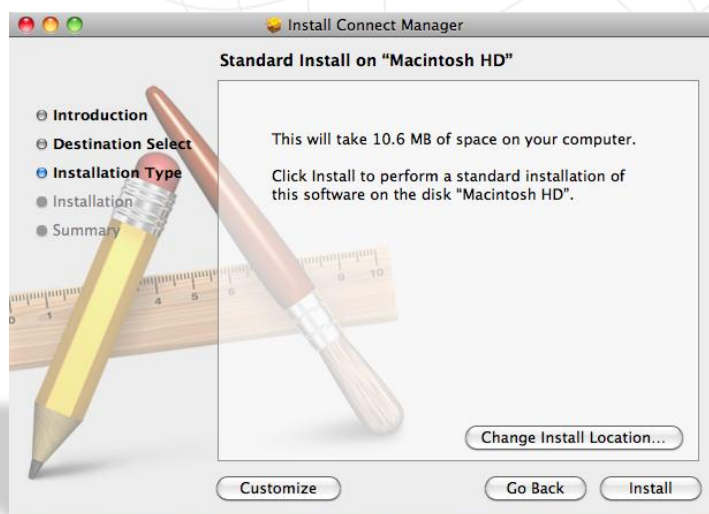

Summary tab


■ Click **Close**

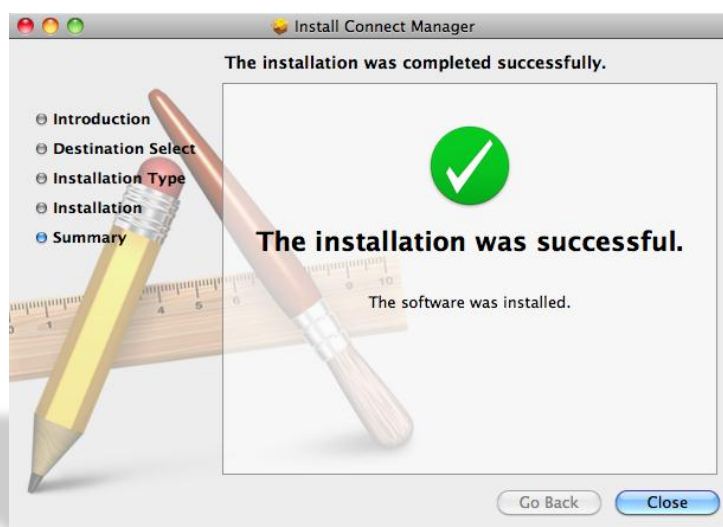




Connect Manager window

- Enter the **PIN**
- Click **OK**

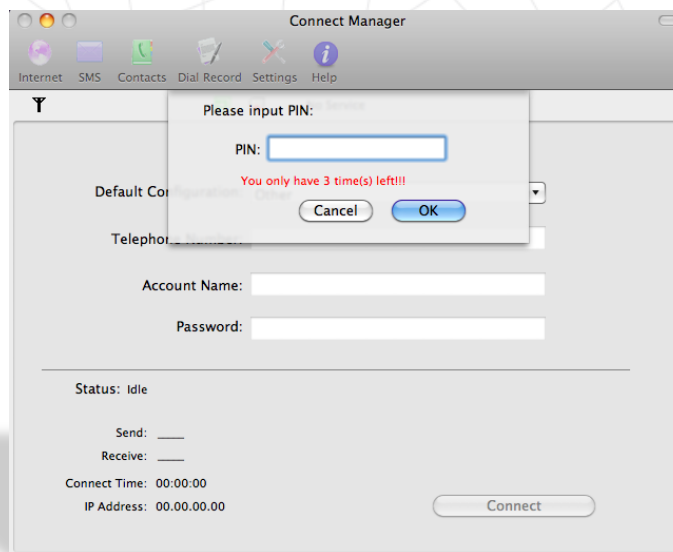

Connect Manager window


- Select **Edit Configuration** from the **Default Configuration** list

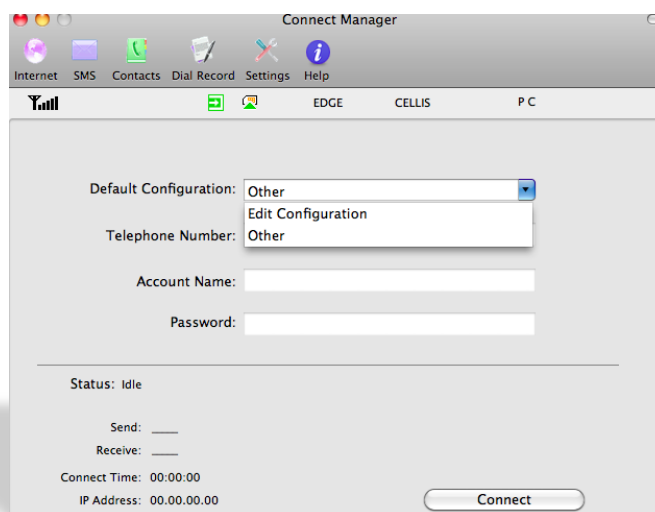




Connect Manager window

- Click on the “+” button

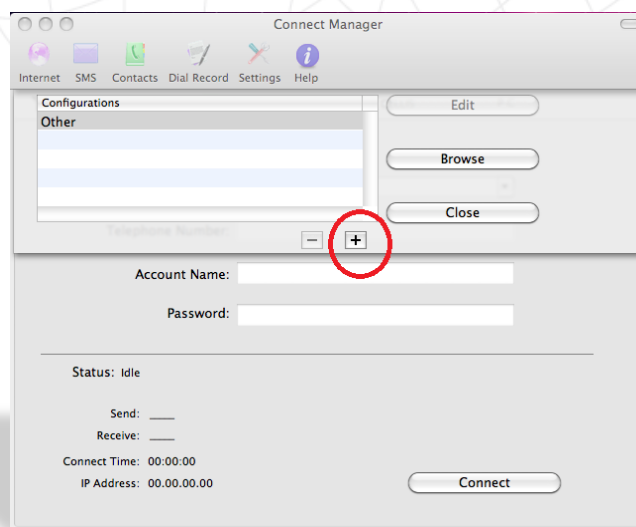

Connect Manager window

- Click on the **Edit** button

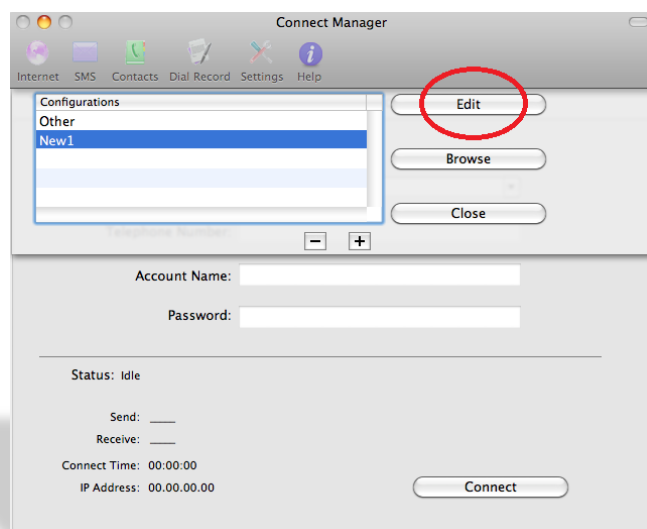



Fill the fields in the **Connect Manager** window

- Description: **3G**
- Telephone Number: ***99#**
- Click **Save Username and Password**
- Click **Use the following APN name**
Enter: **usb.mic1.com.lb**
- Click **Obtain DNS server address automatically**
- Click **Obtain PDP address automatically**
- Click **Obtain PDP address automatically**
Click: **PAP**
- Click **OK**

Connect Manager

Internet SMS Contacts Dial Record Settings Help

Description: Account Name:

Telephone Number: Password:

☐ Save Username and Password

☒ Obtain APN address automatically ☒ Obtain DNS server address automatically

☐ Use the following APN name ☐ Use the following DNS server address

APN: Preferred DNS:

☒ Obtain PDP address automatically ☐ Use the following PDP address

Address: Alternate DNS:

Authentication Mode: ☒ PAP ☐ CHAP

Send: Receive:

Connect Time: 00:00:00 IP Address: 00.00.00.00



Connect Manager window

- Select **3G** from the **Default Configuration** list
- Click **Connect**

A screenshot of the Connect Manager application window. The window has a title bar with standard OS controls. Below the title bar is a menu bar with options: Internet, SMS, Contacts, Dial Record, Settings, and Help. A toolbar with icons for various functions is located below the menu bar. The main area of the window contains a 'Default Configuration' dropdown menu set to '3G'. Below this are input fields for 'Telephone Number' (containing '*99#'), 'Account Name' (containing 'mic1'), and 'Password' (containing four dots). A horizontal line separates these fields from the status section. The status section shows 'Status: Idle', 'Send: ___', 'Receive: ___', 'Connect Time: 00:00:00', and 'IP Address: 00.00.00.00'. A 'Connect' button is located at the bottom right of the window.

Connect Manager window

- Status will change to **Connected**

A screenshot of the Connect Manager application window, showing the status after a successful connection. The 'Default Configuration' dropdown is still set to '3G'. The 'Telephone Number', 'Account Name', and 'Password' fields remain the same. The status section now shows 'Status: Connected', which is circled in blue. Below this, it displays 'Send: 6.89 KB', 'Receive: 6.62 KB', 'Connect Time: 00:01:00', and 'IP Address: 172.23.73.95'. A 'Disconnect' button is located at the bottom right of the window.